
USER MANUAL

**MODEL NUMBER:
F5.0L**

5 LITER PUMP UP FOAM UNIT

English (Original Instructions)



Read all instructions and warnings in this manual before using this equipment. Keep this manual for future reference. Do not discard or destroy.



PROTECT THE ENVIRONMENT. Dispose of packaging materials, old machine components, and hazardous fluids in an environmentally safe way according to applicable waste disposal regulations. Always recycle when appropriate.

IMPORTANT SAFETY INSTRUCTIONS



Safety alert symbols are used in this manual to alert you to potential personal injury hazards.



Mandatory action symbols are used in this manual to specify where personal protective equipment (PPE) requirements must be confirmed with the safety data sheet (SDS) for the chemical being used with the equipment.

Warning

- Do not alter or modify equipment.
- Use only genuine replacement parts from original manufacturer.
- Use equipment only for its intended purpose.
- Inspect unit before each use. Tighten any loose connections. Be sure hose is not cracked or frayed and shows no sign of swelling. Repair or replace worn or damaged parts immediately.
- Do not use unit if damaged or broken.
- Do not exceed maximum air or fluid pressure for unit (refer to Technical Data).
- Do not use with flammable chemicals or hydrocarbons.
- Always direct discharge away from you or other persons or into approved containers.
- Do not store leftover chemicals in unit.
- Use only chemical products that are formulated for this type of application and compatible with unit materials and pump seals. For information about your chemical product, request chemical Safety Data Sheet (SDS) from your chemical supplier.
- Do not overfill tank.
- Depressurize unit (as described in the After Use Instructions) when not in use and before disassembling.
- Always flush the unit with fresh water when switching from an alkaline to an acid or an acid to an alkaline.
- Do not over-pressurize tank. Stop pumping if pressure relief valve activates.
- Only lift and carry unit by the carrying handle. Do not lift or carry the unit by the pump handle, hose, wand, or other components.
- Use only provided pump to pressurize unit. Pressurizing by any other means may create excessive pressure and cause unit to explode.
- Do not modify or remove pressure relief valve. Do not use unit if pressure relief valve is not operational.
- Never leave unit unattended while pressurized.
- Always depressurize unit before attempting to remove the pump assembly.

Technical Data

REQUIREMENTS	
Liquid temperature range	40-100°F (4.4-37°C)
Chemical compatibility	Chemical products used with this equipment must be formulated for this type of application and compatible with unit materials and pump seals. For more information on chemical compatibility, consult the manufacturer or SDS for your product or contact our customer service department.

SPECIFICATIONS	
Power type	Manual
Chemical pickup type	Draws from pre-mixed solution
Number of products unit can draw from	One product
Suction line length/diameter	11.5 in (29.2 cm) clear poly tubing with 1/8 in (0.3 cm) inner diameter
Capacity	1.3 gallons (5 liters)
Discharge line length/diameter	6.5 ft. (2 m) hose, with 1/4 in. (6.4 mm) inside diameter
Discharge wand/tip type	Polypropylene trigger handle with 17 in (43.2 cm) wand extension and 110° fan tip
Output distance	3-5 ft. (0.9-1.5 m)
Output volume	1 gal/min (3.8 l/min)
Flow rate*	0.25 gal/min (0.9 l/min)
Pump seals	Viton
Fluid fittings type	All-poly
Product height	17 in (2.5 cm)
Run time from full tank**	Approx. 5 min.

*Dilution rates and flow rates given are based on chemical with viscosity of water and factory air pressure settings.

**Area covered and run time may vary based on humidity, air flow, and product used.

Instructions

Operation Instructions:



1. Remove all components from packaging.
2. Attach the lance assembly (LC-LLA-5.0L) to the trigger handle (LC-PSG-5.0L).
3. Confirm air pressure is completely released from unit by pulling the green pressure relief valve (LC-PRV) until the red part of the stem is revealed.
4. Securely hold the unit and unscrew the pump assembly (LC-PA) from the tank head (LC-THA-F5.0L).
5. Follow all instructions from chemical manufacturer. Fill tank 3/4 full with pre-mixed solution.
Note: Do not overfill tank with solution.
6. Securely hold the tank (TANK5.0L) and screw the pump assembly (LC-PA) in the tank head (LC-THA-F5.0L).
7. Pressurize the tank by pumping up the unit until the pressure relief valve (LC-PRV) begins to leak air.
8. Once the desired pressure has been achieved, push the pump (LC-PA) down and twist it clockwise to lock it in place.
9. To start foaming, point the wand assembly at the area you wish to foam and squeeze the trigger handle to discharge foam.

After Use Instructions:



1. Release air pressure from unit after each use by pulling the green pressure relief valve (LC-PRV) until the red part of the stem is visible.
2. Empty all solution in tank and run fresh water through unit to rinse parts thoroughly.
3. Use tank handle (LC-HNDL-CLP) to carry unit, NOT pump assembly (LC-PA).

Maintenance Instructions:



Warning: Always depressurize unit before performing maintenance.

To keep your unit operating properly, periodically perform the following maintenance procedures:

- Check the pump assembly for wear and leaks.
- Check the suction tube and screen for debris and clean as needed.
- Periodically lubricate the pump seal with a food safe lubricant. To lubricate the pump seal, raise pump handle and apply 5 to 10 drops of food safe lubricant between pump and pump sleeve.


Note: NEVER USE LUBRICANTS SUCH AS WD40.

Common Replacement Parts

ITEM NUMBER	DESCRIPTION
LC-HA-5.0L	HOSE ASSEMBLY FOR 5L
LC-HNDL-CLP	TANK HANDLE FOR 5L/10L-WITH CLIPS
LC-LLA-5.0L	LONG LANCE (10 IN) ASSEMBLY FOR 5L-WITH RETAINING NUTS
LC-PA	MANUAL PUMP ASSEMBLY FOR 5L/10L-VITON
LC-PRV	PRESSURE RELIEF VALVE FOR 5L/10L
LC-PSG-5.0L	POLY SPRAY GUN FOR 5L-BLUE
LC-SLA-F5.0L	SHORT LANCE (2 IN) ASSEMBLY FOR 5L FOAM UNIT-WITH WADDING AND SPRAY TIP
LC-STB	BUTTON SPRAY TIP FOR 1.5L/5L
LC-THA-F5.0L	TANK HEAD ASSEMBLY FOR 5L FOAM UNIT-WITH PRESSURE RELIEF VALVE AND TANK HANDLE
LC-WA-OR	ORING IN 1.5L/5L WAND
LC-WA-RN	RETAINING NUT FOR 1.5L/5L WAND ASSEMBLY
LC-WD	WADDING DISK FOR 1.5L/5L (1 PIECE)
TANK5.0L	5 LITER TANK

NOTE: Specifications and parts are subject to change without notice.

Parts Diagrams

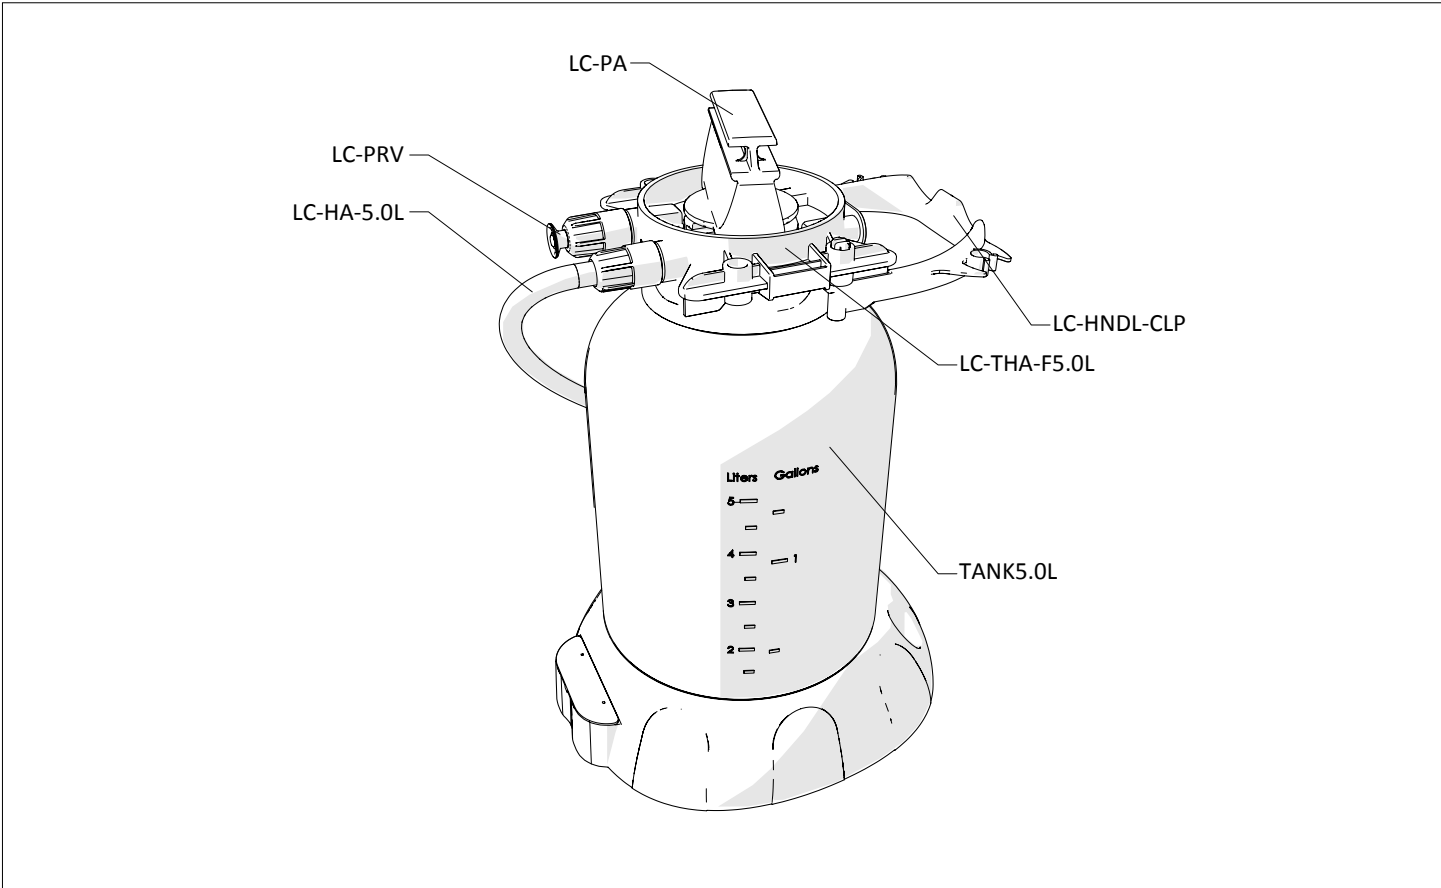

WAND ASSEMBLY ITEM NUMBER: LC-WA-F5.0L

